

15.4.7 Water-level alarm malfunction diagnosis and solution

Error Code	EE/EH 0E
Malfunction conditions	If the sampling voltage is not 5V, the LED will display the failure code.
Possible causes	<ul style="list-style-type: none"> ● Wiring mistakes ● Faulty water-level switch ● Faulty water pump ● Faulty indoor PCB

Power off, then restart the unit 2 minutes later. Is it still displaying the error code?

