

#### 15.4.20 Current overload protection

<b>Error code</b>	F0/ PC 08/ PC 44/PC 46/PC 49
<b>Malfunction decision conditions</b>	If the outdoor current exceeds the current limit value, the LED displays a failure code.
<b>Possible causes</b>	<ul style="list-style-type: none"><li>● Wiring mistakes</li><li>● Faulty bridge rectifier</li><li>● System blockages</li><li>● Faulty outdoor PCB</li></ul>

