

Automatic wiring/piping correction function

Press the "check switch" on the outdoor unit PCB board 5 seconds until LED display "CE", which mean this function is working, Approximately 5-10 minutes after the switch is pressed, the "CE" disappear the wiring/piping error will be corrected, and wiring/piping is properly connected.

***This is a temporary setup intended for diagnostic purposes only. In the event of a power failure, the system memory may reset, potentially leading to further issues if the diagnostic fix is not properly addressed.**