

Data Checking List


CH	Code	Meaning	Remark	CH	Code	Meaning	Remark
0		Detailed error code (nA if no error)		16	TT	Set temperature including compensation	Actual data
1	T1	Room temperature	Actual data	17	nA	Reserved	
2	T2	Indoor coil temperature	Actual data	18	nA	Reserved	
3	T3	Outdoor coil temperature	Actual data	19	nA	Reserved	
4	T4	Ambient temperature	Actual data	20	oT	Target Frequency calculated by indoor	Without limitation
5	TP	Discharge temperature	Actual data	21	nA	Reserved	
6	FT	Targeted frequency	Actual data	22	nA	Reserved	
7	Fr	Actual frequency	Actual data	23	nA	Reserved	
8	dL	Running current	3.2A=3	24	nA	Reserved	
9	Uo	Input voltage	220V=22*	25	nA	Reserved	
10	Sn	Reserved		26	nA	Reserved	
11	--	Reserved		27	nA	Reserved	
12	Pr	Outdoor fan speed	Actual data/8	28	nA	Reserved	
13	Lr	EXV opening steps	Actual data/8	29	nA	Reserved	
14	Ir	Indoor fan speed	Actual data/8	30	nA	Reserved	
15	Hu	Humidity (if a sensor there)	Actual data, %				

The indoor unit will show code for 2 seconds, and then the value.


** Some other units will show 22-20, some will show 220.*



Items Shown

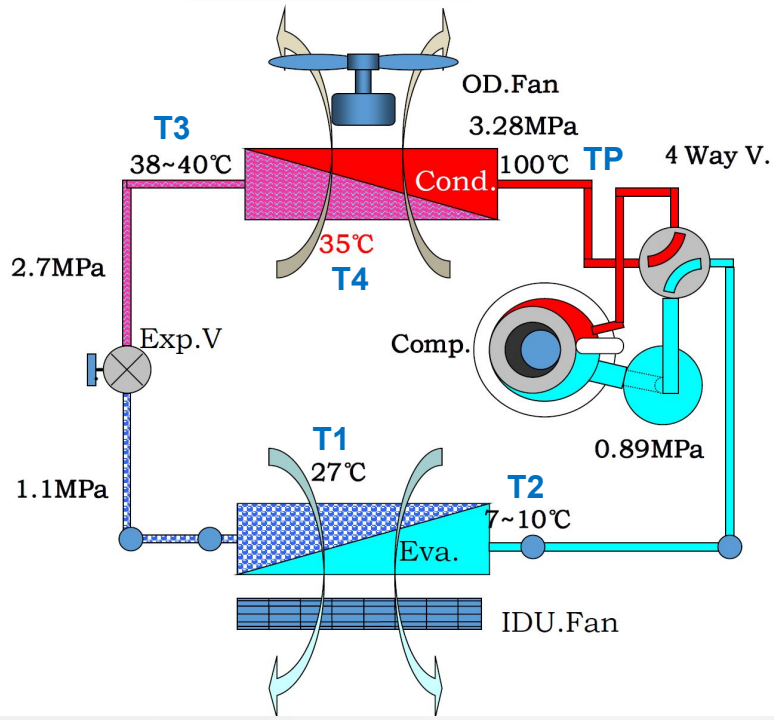

Design Parameters for reference

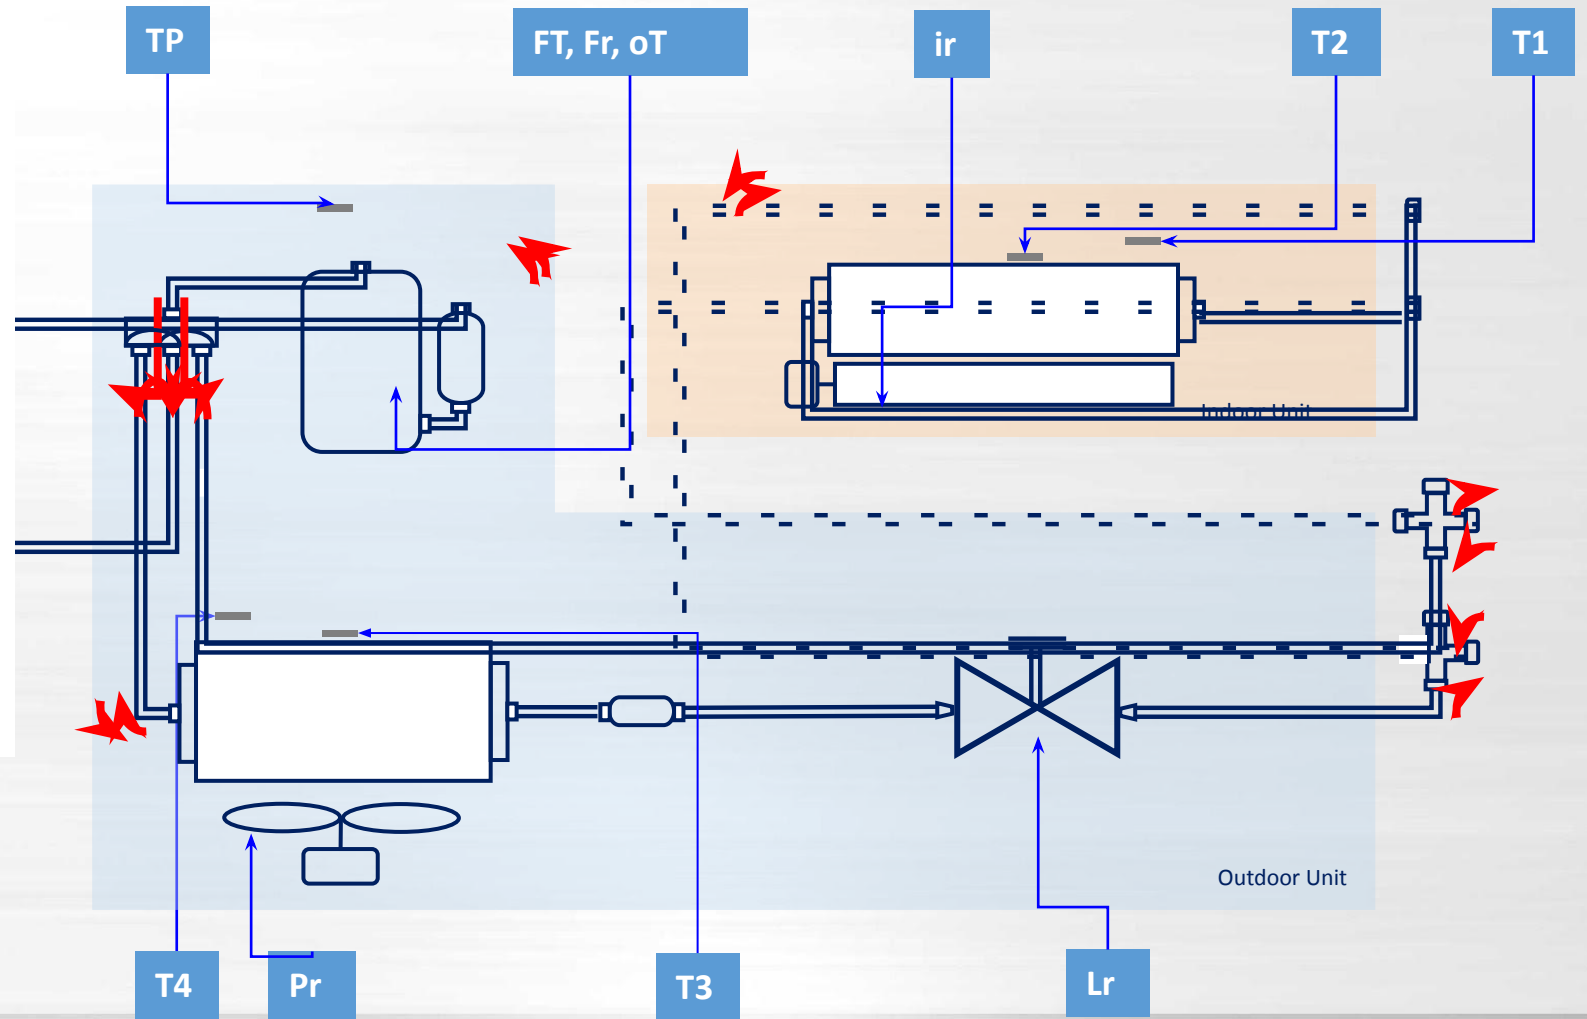

* To see more, visit [Custom Engineering](#) on our website